



Legend

ACQ = Acquiring	Bm = Target bearing (hor)
LCL = Local	Em = Target elevation (hor)
ASD = Assigned	Bs'2 - 1 = Previous gun bearing
SYS = Stand-by	Es'2 - 1 = Previous gun elevation

(SWITCH CONTACTS ARE SYMBOLIC*)

GUN CONTROL DIAGRAM